


ACX104B Potentiometer Rotary Position Sensor

Technical Information

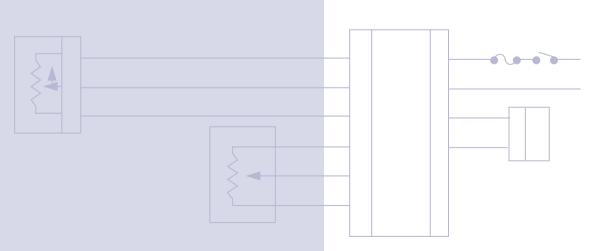





Revisions

Revision History

Table of Revisions

Date	Page	Changed	Rev
29 July, 2010		Initial release	AA

© 2010 Sauer-Danfoss. All rights reserved.

Sauer-Danfoss accepts no responsibility for possible errors in catalogs, brochures and other printed material. Sauer -Danfoss reserves the right to alter its products without prior notice. This also applies to products already ordered provided that such alterations can be made without affecting agreed specifications. All trademarks in this material are properties of their respective owners. Sauer-Danfoss, the Sauer-Danfoss logotype, the Sauer-Danfoss S-icon, PLUS+1™, What really matters is inside® and Know-How in Motion™ are trademarks of the Sauer-Danfoss Group.



Contents

Product Overview	Description4			
	Features4			
	Ordering Information			
Technical Data	Electrical	. 5		
	Data5			
	Travel	_		
	Phasing	. 5		
	Environmental			
	Vibration			
	Shock			
	Temperature	. 5		
	Temperature	. 5		
Installation	Dimensions	.6		
	Location	.6		
	Mounting	.6		
	Wiring			
	Connection Diagram— Proportional Rotary Position Control			
	Connection Diagram— Proportional Steering Control	. 7		
	Connection Diagram— Other Wiring Considerations	-		
		, ,		



Product Overview

Description

The ACX104B Potentiometer Rotary Position/Steering Sensor is a versatile control module applicable in a wide range of machine uses. In rotary position use, the sensor measures the relative height of the machine in relation to an external reference such as a stringline. In steering use, the sensor measures the machine's relative distance from a reference such as a curb. In both cases, the electrical signal is fed into a controller such as the ACE100A and, in steering usage, is compared to an ACX104C track or wheel feedback system. The ACX104B provides the necessary sensing control for rotary position or steering machinery such as asphalt or slipform pavers.

Signals come from an internal potentiometer that rotates directly with the outer hub. A follower attached to the hub provides a means of tracing a stringline or other reference surface. Follower movement rotates the shaft of the potentiometer, giving proportional signal to the controller. Typically the controller will be used to drive a V7059A Servovalve or KVF Flow Control Servovalve to reposition the machine as deviations occur.

Features

- Adjustable spring bias on the hub varies the follower tension on the stringline or reference surface
- Rugged housing
- Resists corrosion, moisture and other damaging environmental effects
- Compact unit can be mounted on almost any surface
- Connections between controller and sensor are made easily through MS connectors
- Easy to remove for service or replacement
- Two position (Run/Standby) switch available

Ordering Information

Specifications

ACX104B1002	1 kilohm, 90° potentiometer, without switch.		
ACX104B1028	uto/Manual ON/OFF switch, no mounting tabs		
ACE100A	Controller, order if needed.		
KVF	Servovalve		
KW01009	Cable assembly, can be used to provide connections. The two-foot coiled cable extends to ten feet.		
K04185	Mating connector		
Follower	Order as necessary, see Installation, Wiring section.		



Technical Data

Electrical

Data

Input voltage	24 Volts maximum		
Output voltage	30% to 70% of input		
Resistance	1000 ohms, +20%		

Travel

Physical stops limit travel to approximately 20 degrees (18 degrees minimum). The potentiometer wiper is electrically centered when the indicator line on the hub is parallel to the mark on the case.

Phasing

Resistance between Pins A and B of the MS connector will increase when the hub is rotated clockwise.

Environmental

Vibration

Withstands a vibration test designed for mobile equipment devices that includes two parts:

- 1. Cycling from 5 to 2000 Hz over a range of +1.0 g's to +8.0 g's for a period of one hour (if there are four resonant points), for two hours (if there are two or three resonant points) and for three hours (if there is one or no resonant point). The cycling test is performed on each of the three major axes.
- 2. Resonance dwell for one million cycles over a range of +1.0 g's to +8.0 g's for each of the four most severe resonant points on each of the three major axes.

Shock

Withstands a shock test for mobile equipment devices that consists of three shocks of 50 g's and 11 milliseconds duration in both directions of the three major axes for a total of 18 shocks.

Temperature

Operating Temperature	-18° to 77° C (0° to 170° F)			
Storage Temperature	-40° to 77° C (-40° to + 170° F)			

Weight





Installation


Dimensions

ACX104B Without Flanges Mounting Dimensions

Millimeters [Inches]

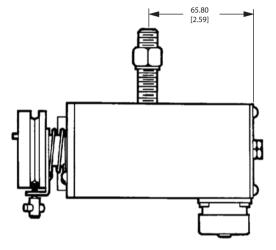

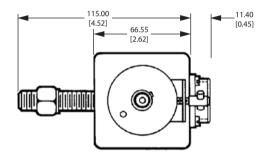

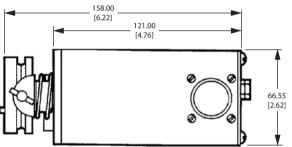

P200 012

Location

The ACX104B may be mounted on either the left or right side of the machine with the hub and follower outward. A mounting stud extends from the back of the case. It must be inserted through a vertical plate that is attached to an appropriate height-adjusting jack. The mounting stud is approximately 4 1/4 inches above the stringline when trailing a grid of 45° below horizontal.

Mounting

The 1/2 inch bolt extending from the case is a rotatable mounting, allowing for proper leveling. It is important that the ACX104B be level in the plane of rotation around this pivot. In grade application, an improper mounting will cause the follower attachment to move up or down on a level surface as the machine moves closer or farther from the stringline. Use a Right Angle Follower (KG04001), skate assembly (KG06001), ski assembly (KG02001) or steering follower (KG07001) for contact to the reference surface.





Installation

Wiring


Direct connections are made through a Bendix MS3102A- 14S-6P (K04183) box receptacle on the case exterior. Connect a 134019ACAA (KW01009) cable to this receptacle. Terminate the other end of the cable with an MS3102A-14S-6P (K04183) bulkhead connector. Wire the bulkhead connector directly to the controller. Reference below schematics: Connection Diagrams — Representative Proportional Rotary Position Control and Representative Proportional Steering Control, or the simple schematic: Connection Diagram — Representative Other Wiring Considerations.

Connection Diagram— Proportional Rotary Position Control

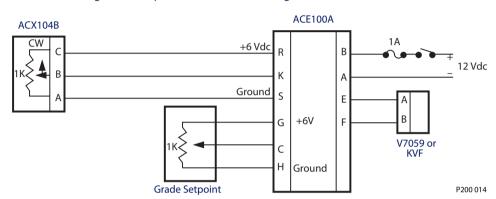

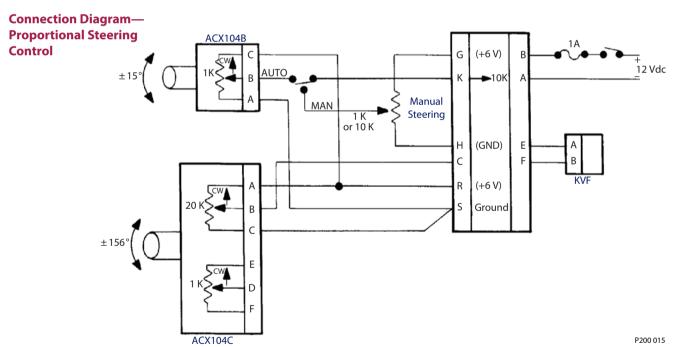

Connection Diagram— Other Wiring Considerations

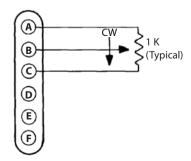

P200 013



Products we offer:

- Bent Axis Motors
- Closed Circuit Axial Piston Pumps and Motors
- Displays
- **Electrohydraulic Power Steering**
- Electrohydraulics
- Hydraulic Power Steering
- **Integrated Systems**
- **Joysticks and Control Handles**
- Microcontrollers and Software
- **Open Circuit Axial Piston Pumps**
- **Orbital Motors**
- PLUS+1™ GUIDE
- **Proportional Valves**
- Sensors
- Steering
- **Transit Mixer Drives**

Members of the Sauer-Danfoss Group:

Comatrol

www.comatrol.com

Schwarzmüller-Inverter

www.schwarzmueller-inverter.com

Turolla

www.turollaocg.com

Hydro-Gear

www.hydro-gear.com

Sauer-Danfoss-Daikin

www.sauer-danfoss-daikin.com

Sauer-Danfoss is a global manufacturer and supplier of highquality hydraulic and electronic components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market. Building on our extensive applications expertise, we work closely with our customers to ensure exceptional performance for a broad range of off-highway vehicles.

We help OEMs around the world speed up system development, reduce costs and bring vehicles to market faster. Sauer-Danfoss – Your Strongest Partner in Mobile Hydraulics.

Go to www.sauer-danfoss.com for further product information.

Wherever off-highway vehicles are at work, so is Sauer-Danfoss.

We offer expert worldwide support for our customers, ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide comprehensive global service for all of our components.

Please contact the Sauer-Danfoss representative nearest you.

Local address:			

Sauer-Danfoss (US) Company Sauer-Danfoss ApS 2800 East 13th Street DK-6430 Nordborg, Denmark Ames, IA 50010, USA Phone: +45 7488 4444 Phone: +1 515 239 6000 Fax: +45 7488 4400 Fax: +1 515 239 6618

Sauer-Danfoss GmbH & Co. OHG Postfach 2460, D-24531 Neumünster Krokamp 35, D-24539 Neumünster, Germany 1-5-28 Nishimiyahara, Yodogawa-ku

Phone: +49 4321 871 0 +49 4321 871 122

Sauer-Danfoss-Daikin LTD. Shin-Osaka TERASAKI 3rd Bldg. 6F Osaka 532-0004, Japan Phone: +81 6 6395 6066

Fax: +81 6 6395 8585